



PARTS BREAKDOWN

1" WATER PUMP

MODEL:WP-1020R



BEPOWEREQUIPMENT

.COM




PARTS BREAKDOWN

1" WATER PUMP

MODEL:WP-1020R

WATER PUMP ASSEMBLY

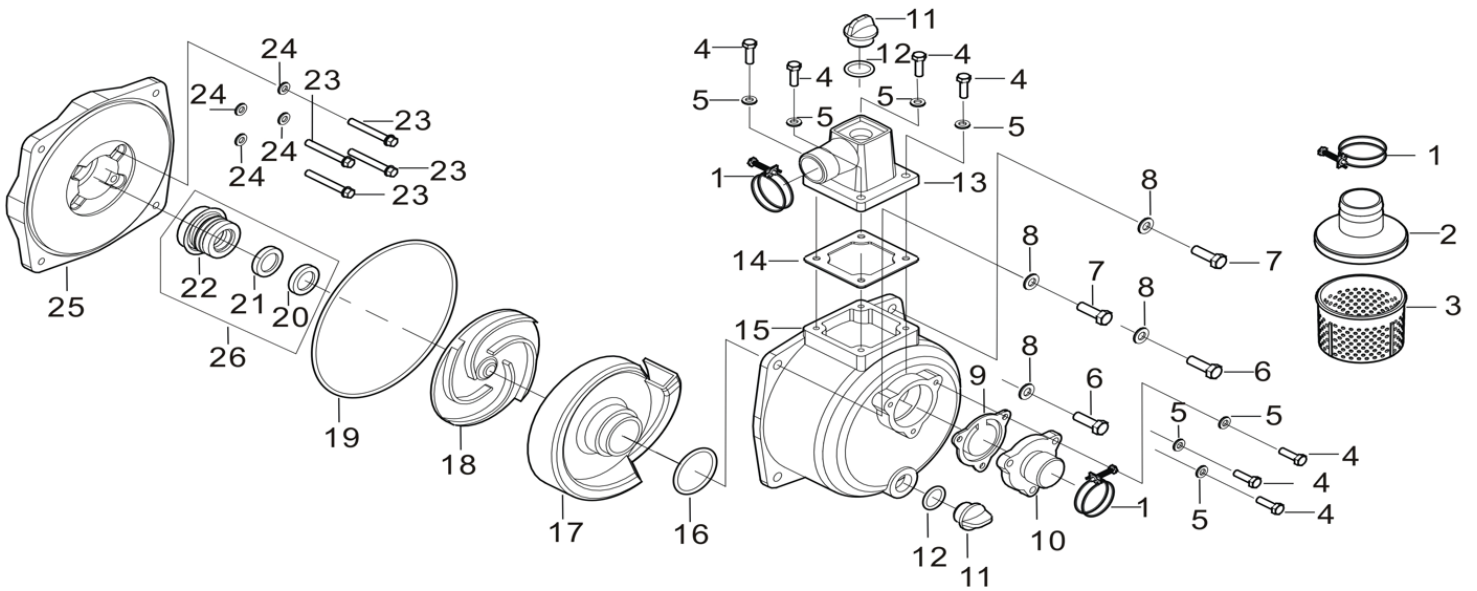

REF #	DESCRIPTION	QTY	BE PART #
2	Filter Cover	1	50.001.307
3	Filter	1	
11	Plug	2	50.001.202
12	Plug Washer	2	
10	Inlet, Water	1	50.001.201
13	Outlet, Water	1	
15	Pump Body	1	85.571.045
17	Whorl Case	1	85.571.046
18	Impeller	1	50.001.204
9	Gasket, Inlet Water	1	50.001.203
14	Gasket, Outlet	1	
16	Ring, Whorl Case Seal	1	
19	Seal, Water Pump Joint	1	
20	Seal, Impeller	1	
21	Seal, Porcelain	1	
22	Seal Assembly, Mechanical	1	85.571.047
25	Joint, Water Pump	1	
**	Complete Pump Assembly	1	85.150.200




PARTS BREAKDOWN

1" WATER PUMP


MODEL:WP-1020R

AIR FILTER ASSEMBLY

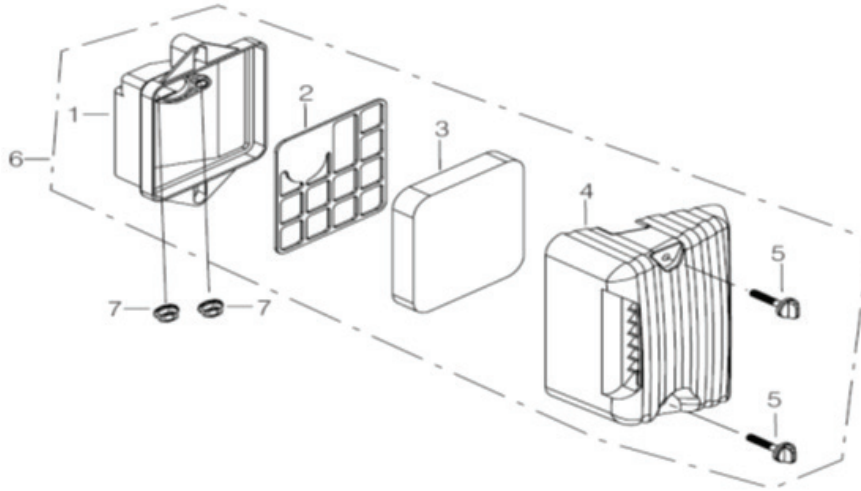

REF #	DESCRIPTION	QTY	BE PART #
6	Air Filter Assembly	1	50.001.302

MUFFLER ASSEMBLY

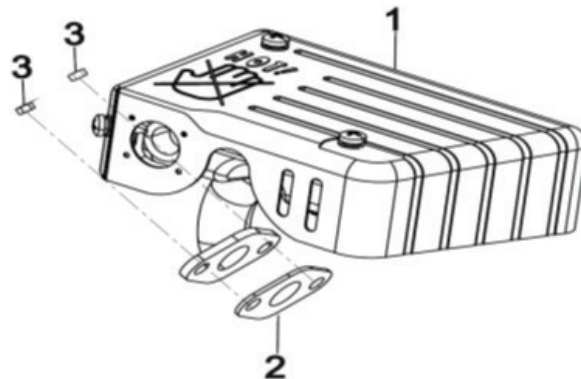

REF #	DESCRIPTION	QTY	BE PART #
1	Muffler Assembly	1	50.001.303




PARTS BREAKDOWN

1" WATER PUMP


MODEL:WP-1020R

HEAD SUBASSEMBLY

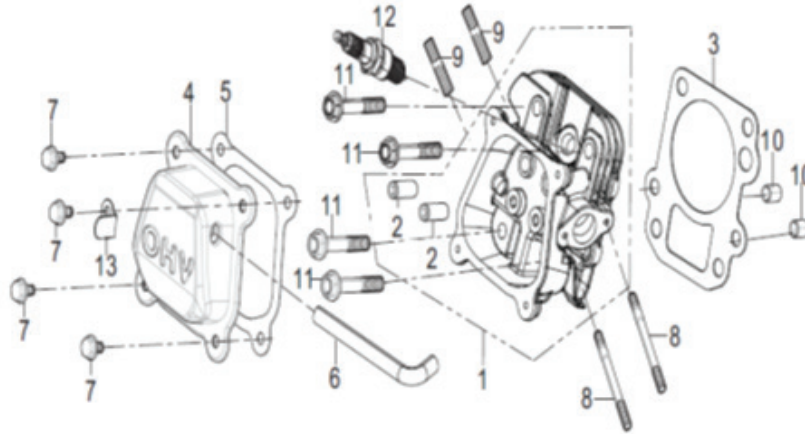

REF #	DESCRIPTION	QTY	BE PART #
12	Spark Plug	1	85.571.125

CRANKCASE

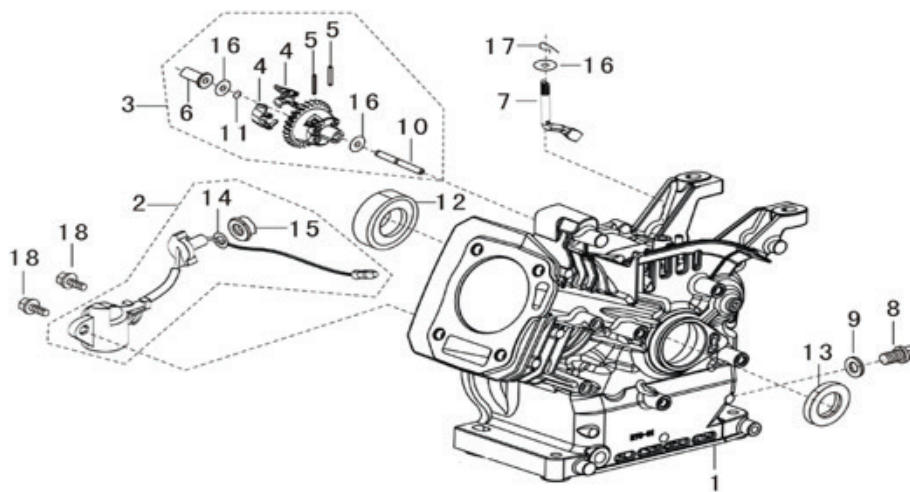

REF #	DESCRIPTION	QTY	BE PART #
2	Oil Sensor	1	85.571.003




PARTS BREAKDOWN

1" WATER PUMP


MODEL:WP-1020R

CRANK COVER SUBASSEMBLY

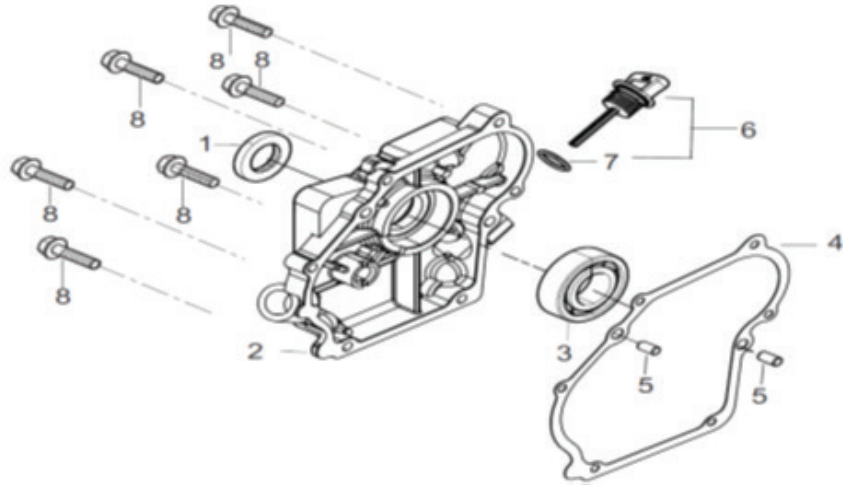

REF #	DESCRIPTION	QTY	BE PART #
6	Dipstick	1	85.571.114
7	Seal	1	

SHROUD

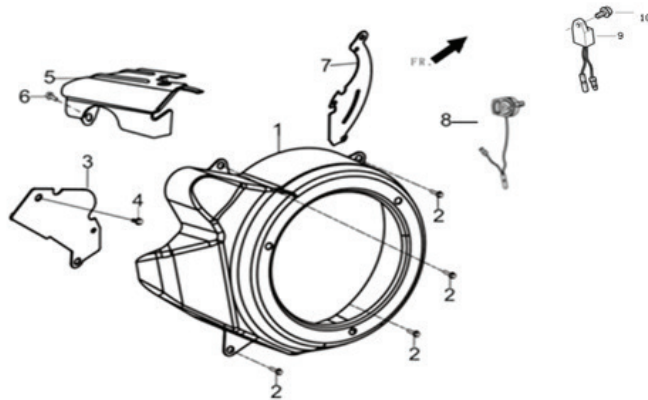

REF #	DESCRIPTION	QTY	BE PART #
8	ON/OFF Switch	1	85.571.310




PARTS BREAKDOWN

1" WATER PUMP


MODEL:WP-1020R

FUEL TANK

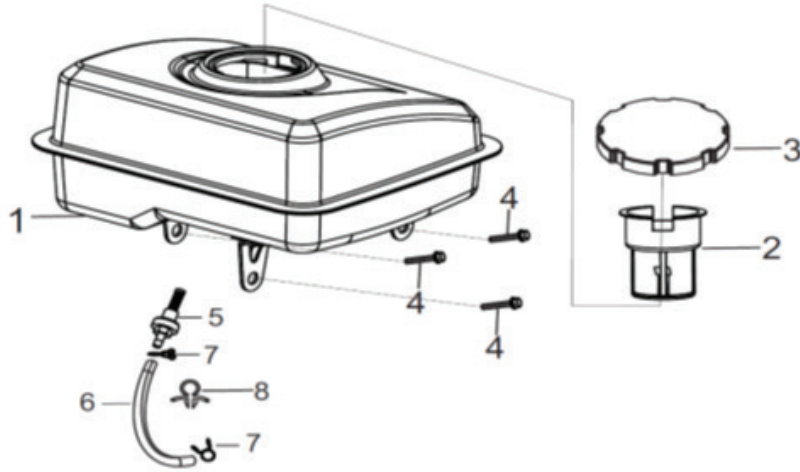

REF #	DESCRIPTION	QTY	BE PART #
1	Fuel Tank	1	50.001.304
2	Fuel Strainer	1	50.001.305
3	Fuel Cap	1	
5	Fuel Outlet	1	85.571.042
6	Fuel Line	1	
7	Clip	1	

IGNITION COIL

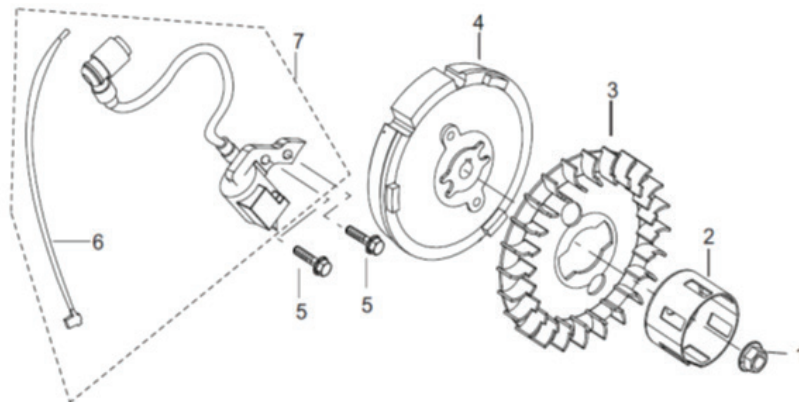

REF #	DESCRIPTION	QTY	BE PART #
7	Ignition Coil	1	85.571.122




PARTS BREAKDOWN

1" WATER PUMP

MODEL:WP-1020R

THROTTLE CONTROL ASSEMBLY

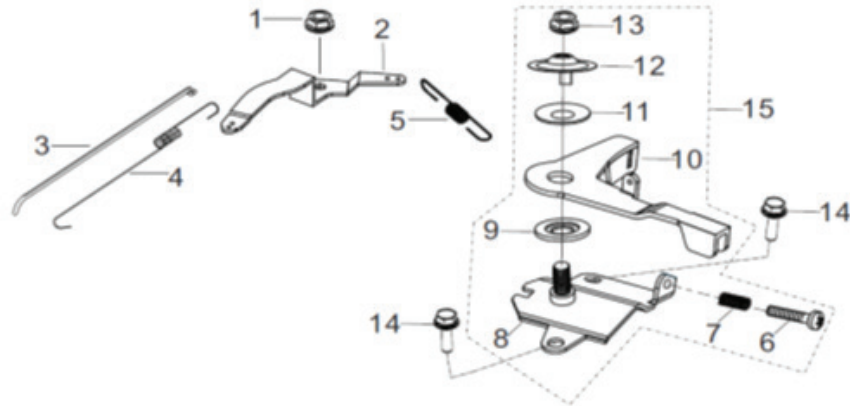

REF #	DESCRIPTION	QTY	BE PART #
3	Governor Rod	1	50.001.306
4	Throttle Spring	1	

BE

POWER EQUIPMENT

If you need technical assistance call:

1-866-850-6662

(8:00am - 4:30pm PST, Mon - Fri)